


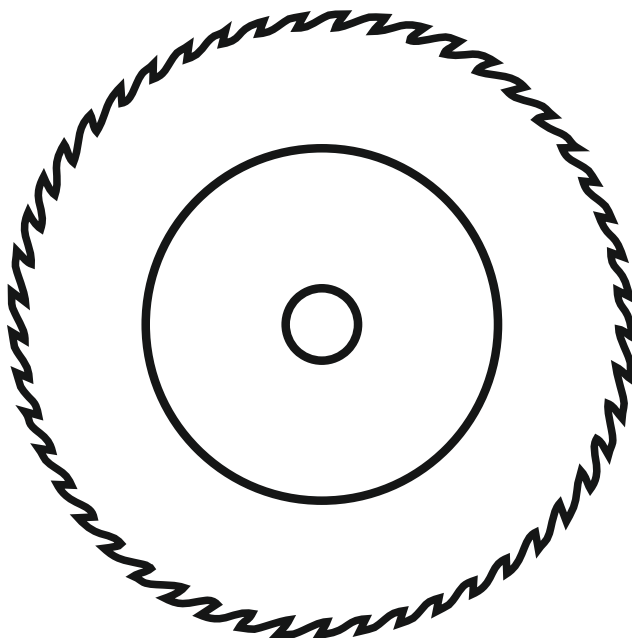

TCT SAW ALUMINIUM BLADE

Original Operating Instructions



www.idealpowertools.com

CHANGE SAW BLADE

Note: Replacement blade sold separately.

1. Unplug the tool from its power source.
2. Pull out the Head Lock-Down Pin, raise the Saw Head to the upper position, then raise the Lower Blade Guard out of the way and hold it up.
3. Loosen the Guard Plate Bolt until it disengages the Guard Plate.
4. Swing the Guard Plate up and out of the way.
5. Press in the Spindle Lock on the back of the saw's head and hold it in.

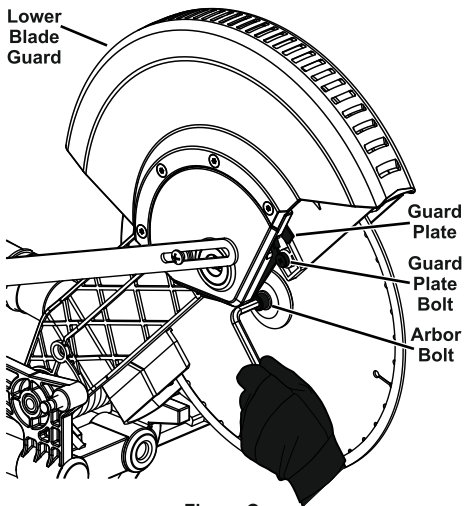


Figure C

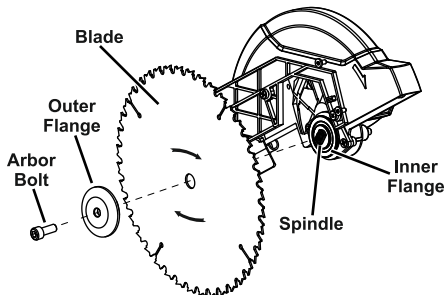


Figure D

Note: Make sure the Inner Flange stays in place on the Spindle.

6. Remove the Arbor Bolt and Outer Flange. Refer to Figure D.
IMPORTANT: The Arbor Bolt has a left-handed thread and removes by turning **CLOCKWISE**.
7. Remove the used blade. Install the new Blade. **Make sure that the Blade's rotation arrow points in the same direction as the rotation arrow on the Upper Blade Guard.**
8. Replace the Outer Flange and Arbor Bolt. Position the cupped side of the Flange against the Blade. Hold in the Spindle Lock and wrench tighten the Arbor Bolt by turning it **COUNTERCLOCKWISE**. Release the Spindle Lock.
9. Rotate the Guard Plate back into place, and secure it with the Guard Plate Bolt.
10. **WARNING! TO PREVENT SERIOUS INJURY: Make sure the Lower Blade Guard operates smoothly and properly protects from the Blade before using the Saw.**



Read the ENTIRE IMPORTANT SAFETY INFORMATION section at the beginning of this manual including all text under subheadings therein before set up or use of this product.