


ID C7SC

Part No: 26731

CIRCULAR SAW

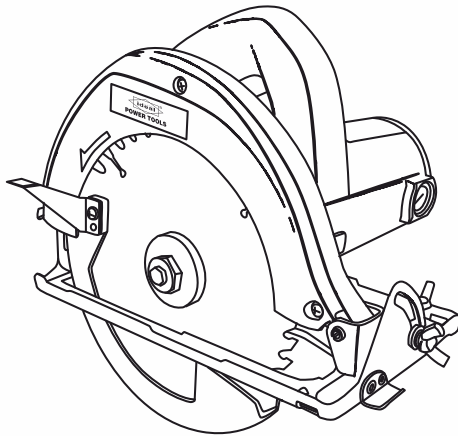

 Read though carefully and understand these instructions before use.

OPERATION INSTRUCTIONS

GENERAL OPERATIONAL PRECAUTIONS

WARNING! When using electric tools, basic safely precautions should always be followed to reduce the risk of fire, electric shock and personal injury, including the following.

Read all these instructions before operating this product and save these instructions.

For safe operations:

1. **Keep work area clean.** Cluttered areas and benches invite injuries.
2. **Consider work area environment.** Don't expose power tools to rain. Don't use power tools in damp or wet locations. Keep work area well lit.
Don't use tool in presence of flammable liquids or gases.
Power tools produce sparks during operation. They also spark when switching ON/OFF. Never use power tools in dangerous sites containing lacquer, paint, benzine, thinner, gasoline, gases, adhesive agents, and other materials, which are combustible or explosive.
3. **Guard against electric shock.** Prevent body contact with grounded surface. For example, pipes, radiators, ranges, refrigerator enclosures.
4. **Keep children away.** Do not let visitors contact tool or extension cord. All visitors should be kept away from work area.
5. **Store idle tools.** When not in use, tools should be stored in a dry and high or locked-up place, out of reach of children.
6. **Don't force tool.** It will do the job better and safer at the rate for which it was intended.
7. **Use right tool.** Don't force small tool or attachment to do the job of a heavy-duty tool. Don't use tool for purpose not intended.
8. **Dress properly.** Do not wear loose clothing or jewelry. They can be caught in moving parts. Rubber gloves and non-skid footwear are recommended when working outdoors. Wear protective hair covering to contain long hair.
9. **Use eye protection.** Also use face or dust mask if cutting operation is dusty.
10. **Don't abuse cord.** Never carry tool by cord or yank it to disconnect from receptacle. Keep cord from heat, oil and sharp edges.


11. **Secure work.** Use clamps or a vise to hold work. It's safer than using your hand and it frees both hands to operate tool.
12. **Don't overreach.** Keep proper footing and balance at all times.
13. **Maintain tools with care.** Keep tools sharp and clean for better and safer performance. Follow instructions for lubricating and changing accessories. Inspect tool cords periodically and if damaged, have repaired by authorized service center. Inspect extension cords periodically and replace if damaged. Keep handles dry, clean, and free from oil and grease.
14. **Disconnect tools** when not in use, before servicing, and when changing accessories, such as blades, bits, and cutters.
15. **Remove adjusting keys and wrenches.** Form habit of checking to see that keys and adjusting wrenches are removed from tool before turning it on.
16. **Avoid unintentional starting.** Don't carry plugged-in tool with finger on switch. Be sure switch is off when plugging in.
17. **Outdoor use extension cords.** When tool is used outdoors, use only extension cords intended for use outdoors and so marked.
18. **Stay alert.** Watch what you are doing using common sense. Do not operate tool when you are tired.
19. **Check damaged parts.** Before further use of the tool, a guard or other part that is damaged should be carefully checked to determine that it would operate properly and perform its intended function. Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting, and any other conditions that may affect its operation.

A guard or other part that is damaged should be properly repaired by an authorized service center unless otherwise indicated elsewhere in this Operation Instructions. Have defective switches replaced by authorized service center. Do not use tool if switch does not turn it on and off.
20. **Warning!** The use of any accessory or attachment, other than those recommended in this Operation Instructions, may present a risk of personal injury.
21. **Have your tool repaired by a qualified person.** This electric tool is in



ADDITIONAL SAFETY RULES

1. Precautions on Using Circular Saw:


- Always be sure that the machine is switched off and unplugged before carrying out any work on the machine.
 - Check and determine the saw blade to be in good condition. Do not use saw blades which are deformed or cracked.
 - Do not use saw blades made of high-speed steel.
 - Do not use saw blades which do not comply with the characteristics specified in this Operation Instructions.
 - Do not stop the saw blade by lateral pressure on the disc.
 - Always keep the saw blades sharp.
 - Ensure that the safety cover moves smoothly and freely.
 - Never use the circular saw with its safety cover fixed in the open position.
 - Ensure that the retraction mechanism of the guard system operates correctly.
2. Do not use any kind of grinding wheel.
 3. The saw blade must be thinner than the riving knife and the width of cut, and the kerfs (with teeth set) of the saw blade must be greater than the thickness of the riving knife.
 4. The riving knife should always be use except when plunging in the middle of the workpiece.
 5. Ensure that the distance between the riving knife and the teeth brim of the saw blade should not more than 5mm, and the teeth brim should not protrude the bottom of the riving knife more than 5mm. (**Fig. 1**)
 6. Ascertain that the workpiece is free of foreign matter such as nails.
 7. Do not use circular saw with its safety cover be removed.

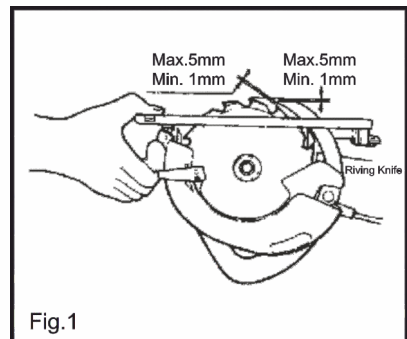



8. When cutting a big lumber, a wooden workbench or wooden upholders should be needed to reduce the risk of rebound or the saw blade to be clamped. (Fig.2&3)

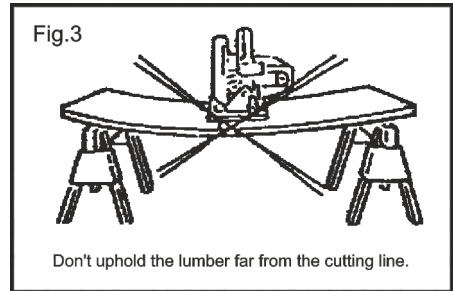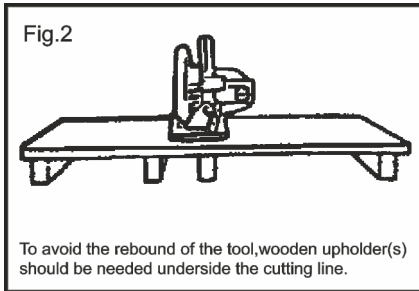



9. Avoid the dangerous of rebound. When the speed reduced suddenly, the tool will rebound to the operator. Should this happens, turn off the switch immediately. Never put your hand or finger(s) afterward the tool, because once the tool rebounds, injuries will be occurred (Fig. 4).

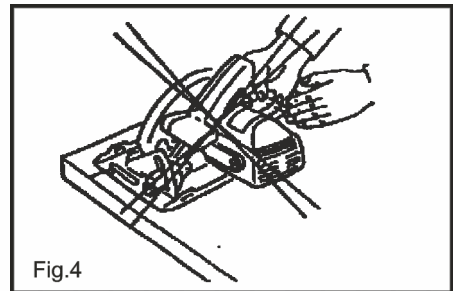

10. Secure the workpiece and use right way to cut the end of a lumber. (Fig.5, 6 &7)

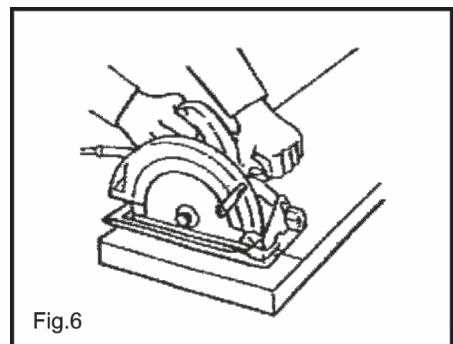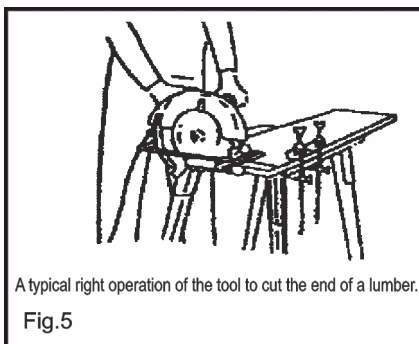

11. Always take care in preventing the power cord from coming near the revolving saw blade.
12. Never attempt to cut with the tool held upside down in a vise. This can lead to serious accidents, because it is extremely dangerous. (Fig.8)
13. Should the saw blade stop or make an abnormal noise during operation, turn OFF the switch immediately.
14. Never lay down the circular saw while the saw blade is revolving.
15. Replace the saw blade when the blade diameter becomes less than 162mm at the base of the teeth.

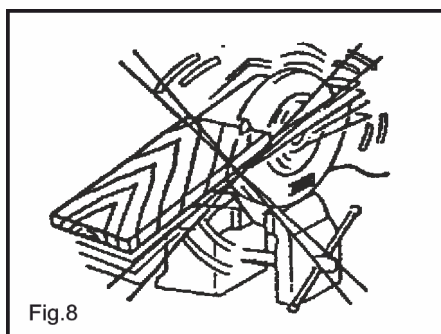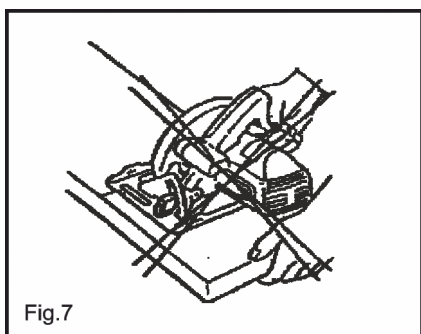

SAVE THESE INSTRUCTIONS.

INSTRUCTIONS FOR OPERATION


1. Mounting and Dismounting the Saw Blade

CAUTION:

To avoid serious accident, please ensure the switch is in the OFF position, and the power source is disconnected.

(1) Dismounting the saw blade

- Set the cutting volume at maximum and place the circular saw as



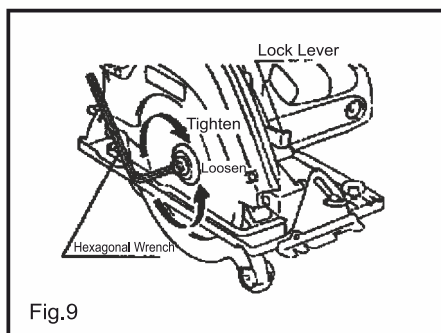


shown in **Fig. 9**.

- Depress the lock lever to lock the spindle and remove the hexagonal-head bolt with the hexagonal wrench.
- While holding the safety cover lever to keep the safety cover fully retracted into the saw cover, remove the saw blade. (**Fig. 10**)

(2) Mounting the saw blade

- Thoroughly remove any sawdust which has accumulated on the spindle, bolt and washers. And follow the dismounting procedures in reverse to mount the saw blade. After having attached the saw blade, reconfirm that the lock lever is firmly secured in the prescribed position.
- To assure proper rotation direction of the saw blade, the arrow on the saw blade must coincide with the arrow direction on the saw cover.
- As shown in **Fig.11**, the sides of the inner flange with a projected center the same diameter as the inner diameter of the saw blade and the concave side of the outer flange must be fitted to the saw blade sides. The inner flange is supplied for 2 types of saw blades with the inner diameters of 20mm and 30mm. Ensure to choose the correct side of the inner flange to mount. Incorrect choose can lead to dangerous vibration.

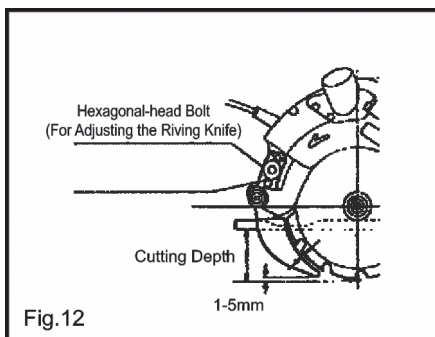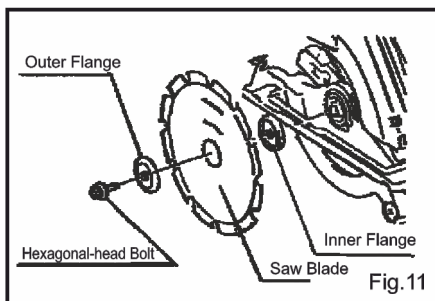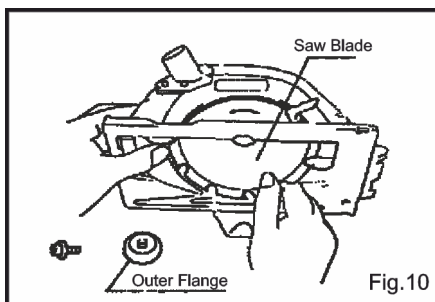

2. Adjusting the Riving Knife

Loosen the hexagonal-head bolt used to clamp the riving knife, adjust the riving knife to a right position (**Fig.12**) and securely retighten the bolt.

After adjustment, ensure that the riving knife moves in accordance with the adjusted cutting depth.

3. Adjusting the Cutting Depth

As shown in **Fig.13**, hold the handle with one hand while loosening the knob with the other. The cutting depth can be adjusted by moving the base to the desired position. In such manner adjust the cutting depth and then securely retighten the knob.

4. Adjusting the Angle of Inclination

As shown in **Fig.14**, by loosening the wing-bolt on the incline gauge and the wing nut on the base, the saw blade may be inclined to a maximum angle of 45° in relation to the base. After having completed the adjustment, reconfirm that both wing-bolts are firmly tightened.

5. Switching On and Off

To avoid unintentional starting, this tool is equipped with a protective switch (**Fig.15**). Press the protective switch firstly, then press the trigger to start. To switch off, just release the trigger.

6. Regulating the Guide (Fig.16)

The cutting position can be regulated by moving the guide to the left or right after loosening its

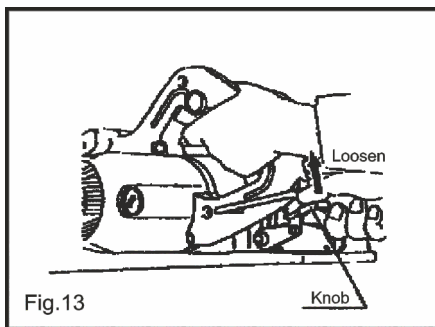


Fig.13

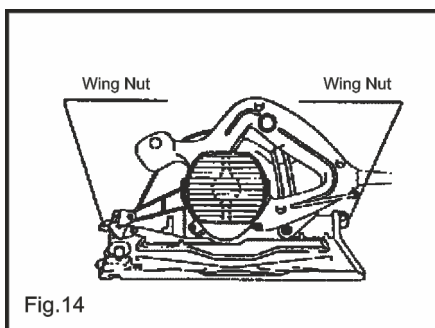


Fig.14

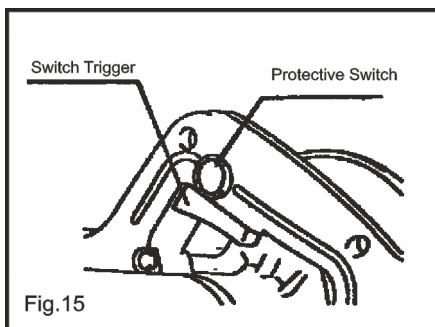


Fig.15



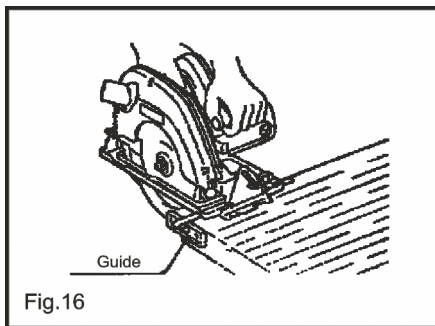


Fig.16

wing-bolt. The guide may be mounted on either the right or left side of the tool.

7. Cutting Operation

- Select level ground to stabilize the wooden workbench or upholders, shaky positioning of the workbench or upholders is hazardous. The portion of lumber to be left after cutting must be held tightly. Unless the remaining portion is securely held, a hazard will be created. Always securely hold the portion of lumber remaining after cutting.
- Check that the machine is switched OFF before plugging it into the power supply.
- Wait until the wheel attains full speed before cutting.
- Place the saw body (base) on the lumber, and align the marked off line with the saw blade by use of the front scale. When the saw blade is not inclined, the right-hand side is the reference; when the saw blade is inclined (45°), the left-hand side (marked "45" on the base) is the reference. (Fig.17 & 18)

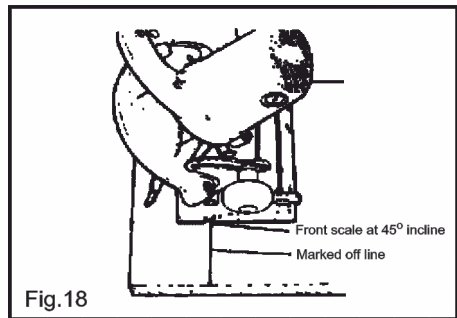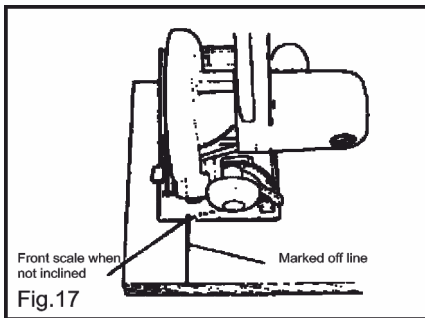

- Hold the tool firmly and move the saw straight at a constant speed to produce a optimum cutting.

MAINTENANCE AND INSPECTION

CAUTION!



Always be sure that the machine is switched off and unplugged before carrying out any work on the machine.

1. Maintenance of the motor

The motor unit winding is the very “heart” of the power tool. Exercise due care to ensure the winding does not become damaged and /or wet with oil or water.

2. Inspecting the carbon brushes

Replace carbon brushes when they are worn down to the “wear limit”. Both identical carbon brushes should be replaced at the same time. (**Fig. 21 & 22**) In addition, always keep carbon brushes clean and ensure that they slide freely within the brush holders.

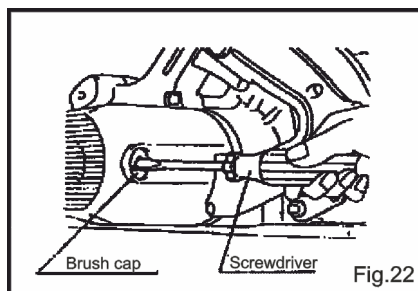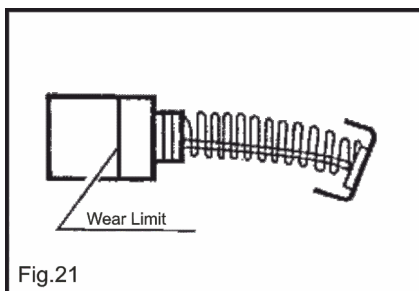


STANDARD ACCESSORIES


○ Hexagonal Wrench

○ Guide



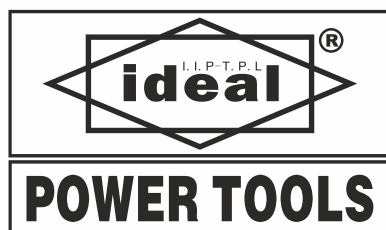

www.idealpowertools.com

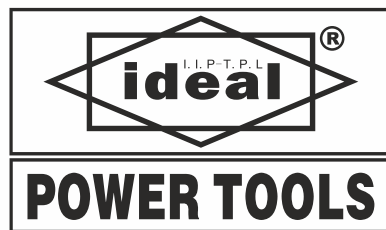

تحذير!



أكدت ماداً من أن اكينتة الم مغلقة و غير موصولة الكهرباء قبل يامقالا أي عمل ها علي.

نصائح المحرك

1. دةحو لف دةحو المحرك هي "قلب" داة الأ لانية الكهرب. توح الحذر لازم ال ضمان عدم تلف اللف و/أو بللة الملف يتزالب أو الماء.


حصف فرش بونركال

2. دل استب فرش الكربون ما عند تنخفض إلى "حد بلى". يجب دال استب كلا اقشالفر بونيترالك المتطابقين في نفس الوقت. (الشكل 21 و 22) الإضافة إلى ذلك فطاحت ماداً بنظافة فرش الكربون أكدوت من هأذ زلق تن بحرية داخل املات اقشالفر.

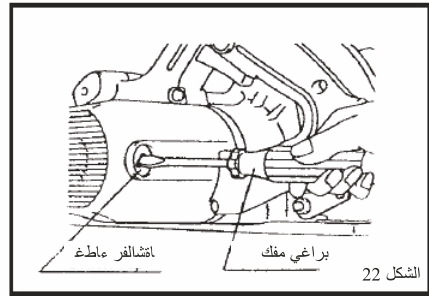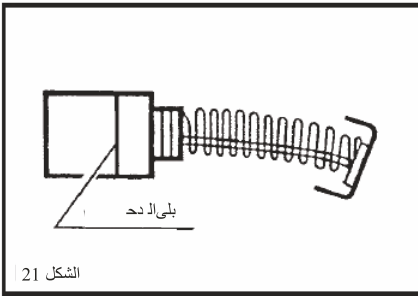

اتلحقمة ية ياسق



▲ احمفت بطر سي اسد

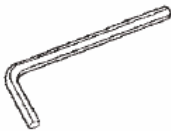

▲ يل الدد

7. ية عمل لقطع

- ▼ اختر ضاراً مستوية يتلنثب اولط العمل الخشبية أو الداعمات وضعف اولط العمل أو ات الداعم ز عزع تالم طيرخ. يجب أن يُمسك زءالج من الخشب ذي ال سيتم تركه بعد قطع ال إحكام. ما لم يتم الاحتفاظ زءالج المتبقي بشكل ، آمن ينشأس طرخ. أميك مادائ إحكام زءالج المتبقي من الخشب بعد قطع ال.
- ▼ ققند من أن الآلة مغلقة قبل هاتوصيد بمصدر الطاقة.
- ▼ ظرننا تي د صلة العجلة إلى سرعة الاملة الك قبل قطع ال.
- ▼ ضع جسم المنشار (دة القاء) على ، الخشب قمو ذاةبما خطال ددالمد مع شفرة المنشار استخدام اس المقيا مي الأم. ما عند تكون شفرة المنشار غير م،ائلة يكون نبالجا الأيمن هو ؛المرجع ما عند تكون شفرة ال ائلةم (45 درجة)، يكون نبالجا الأيسر (وبالمكت عليه “45” على دة القاء) هو المرجع. (كل الش 17 و 18)

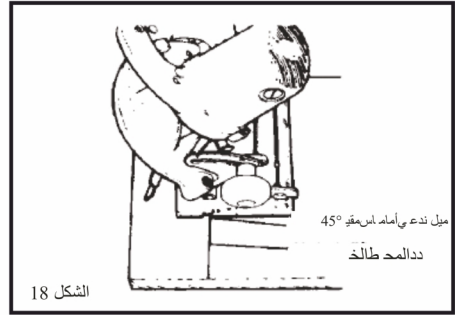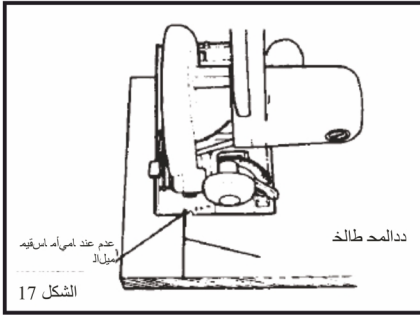

- ▼ أميك داة الأ اتبثب وحرك المنشار بشكل مستقيم سر عت ابنتت تاج لإن قطع الي مث.

بعد ط، بالضد أكدت من أن سكين صالذ
يتحرك وفقاً لعمق قطع الـ دل المع.

3. عمق بطضه لقطع

ماك هو موضع في كل الشـ 13، أمسيك
المقبض يذب دقوا مابين تقوم بفك ودقالم
يبدال الأخرى. يمكن ديل تبع عمق قطع الـ
بتحريك دة اللقاء إلى وضع الم وبطلالم.
ذهبه طريقة الـ قم ديل تبع عمق قطع الـ ثم أعد
شد ودقالم إحكامه.

4. يل دة ية اوز ارحدالات





ماك هو موضع في كل الشـ 14، من خلال
فك البرغي المجنح على اس مقية الانحدار
امولتوالد المجنحة على القاعده يمكن
القام شفرة المنشار إلى زاوية صوية تبلغ
 45° النسبة دة اللقاء. بعد الانتهاء من
التعد، ديل أعد يدالتاك على أن كلا البرغيين
المجنحين مربوطان إحكامه.


5. يل تشغال يقافوا يل تشغال

نبلتة غيل شالته غير قالم، صود تم تجهيز
ذهه داة الـ أتاح فيم اية حم (الشـ 15).
اضغط على أتاح فيم اية حمال، أو لاً ثم اضغط
على ادا الزن للبدء. ف، الـ لا يفل قطع طلقاً
ادا الزن.

6. يمنظتة يل الدل (كل الشـ 16)

يمكن تنظيم وضعم قطع الـ بتحريك ليل الـ
نأيمي أو يساراً بعد فك البرغي المجنح.
يمكن يبركتة ليل الـ على نبالجا الأيمن أو
الأيسر من داة الـ.

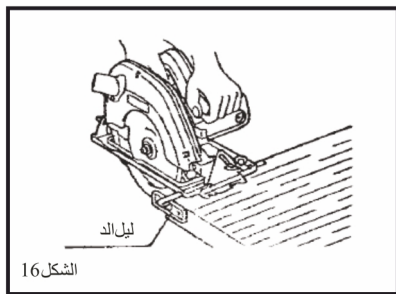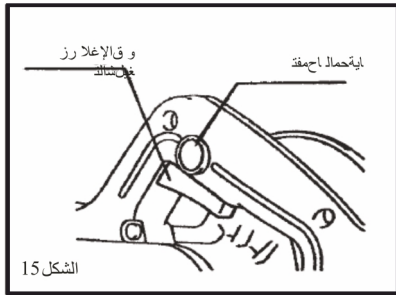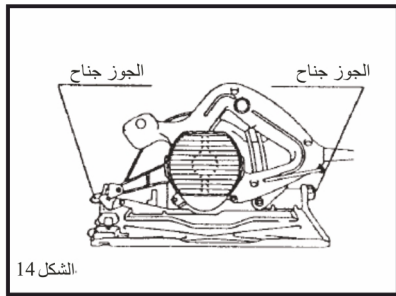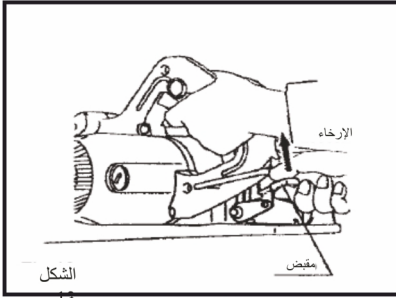


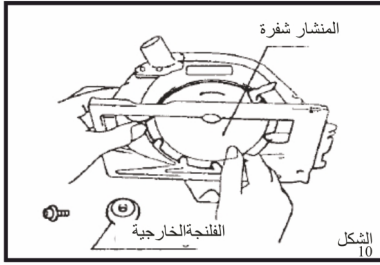

اضغط على ذراع القفل لقفل الدوران وفك البرغي داسي سد الرأس باستخدام تاح فم ربطا داسي سالد.
أزل شفرة المنشار أثناء التسليم رافعة غطاء الأمان لإبقاء غطاء الأمان معاً جمترا
امل بالكا في غطاء المنشار. (كل الش 10)

(2) يبترك رة فش نشار الم


أزل بدقة أي نشارة خشب متراكمة على ودعم الدوران والمسمار والبراغي انت والفك. اتبعو إجراءات الإزالة العكسي بترك شفرة المنشار. بعد يتتب شفرة، المنشار أعد يالتاك على أن ذراع القفل مؤمن بقوة في وضع الم دالمح.
ضمان لاه الاتج الصحيح لدوران شفرة، المنشار يجب أن يتطابق السهم على شفرة المنشار مع اهاتج السهم على غطاء المنشار.

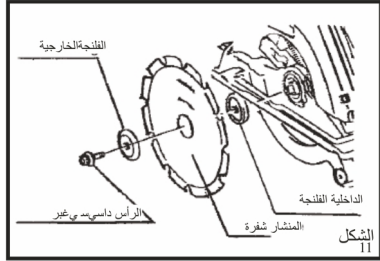



ماك هو موضح في كل الش 11، يجب أن تُركب نبجوا الفلنجة الداخلية تي ال هاب مركز بارز بنفس حجم طرالق داخلي ال شفرة المنشار نبوالجا المقعر للفلنجة الخارجية على نبجوا شفرة المنشار. فرتو الفلنجة الداخلية لنوعين من شفرات المنشار قطاراً داخلية 20 مم و 30 مم. أكدت من تيارخا نبالجا الصحيح للفلنجة الداخلية بتركلتا. يمكن أن دي يو تيارخالا غير الصحيح إلى اهتزازات خطيرة.

2. يل دعت كين سد صل لنا

فك البرغي داسي سد الرأس المستخدم يتلنتب سكين ال، نصل اضبط سكين صل الذ في وضع الم الصحيح (كل الش 12) وأحكم ربط البرغي.

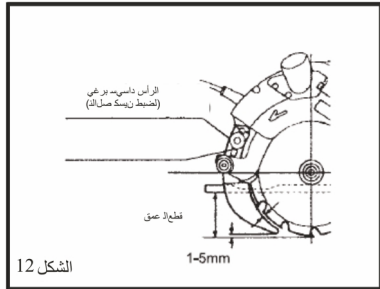


11. انتبه ماداء لمنع السلك نبي الكهربا من الاقتراب من شفرة المنشار دوارة الـ.
12. لا تجرب بدأاً اولهجم قطع الـ داووالاً مثبتة رأساً على عقب في الملزمة. يمكن أن ديؤ ذلك إلى دثحا، خطيرة لأنه أمر فائق خطورة الـ. (كل الشـ 8)
13. إذا توقفت شفرة المنشار أو درت أصد تأسو غير يعي طب أثناء، التشغيل غلقاً تاحفم غيل شالت فوراً.
14. لا تضع المنشار دائري الـ بدأاً أثناء دوران شفرة المنشار.
15. دل استب شفرة المنشار ماعند يقل طرق شفرة الـ عن 162 مم ندع دةقاع نان سالا.

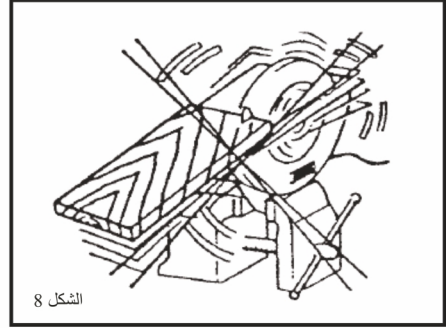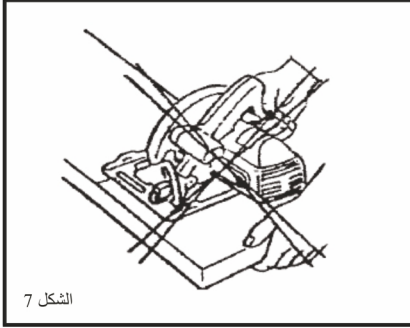

فطاد هذه اتليمتعالـ.

اتليمتع يل تشغالـ

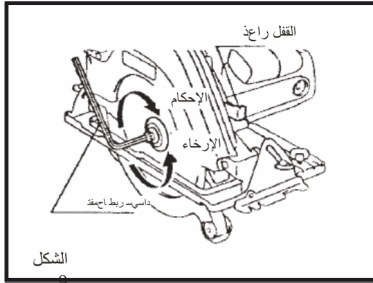

1. يبتترك وإزالة رةقشـ نشارالمـ




تحذير:

نبلجة وقوع أي دثحا، طير أكدت من أن تاحفالم في وضع ف، الإيق وأن مصدر الطاقة صولفم.

- (1) إزالة رةقشـ نشارالمـ



اضبط حجم قطع الـ على الحد صي قالاً
وضع المنشار دائري الـ ماك هو موضح
في كل الشـ 9.

8. ندع قطع ابخشالاً،الكبيرة يجب استخدام اولتط عمل خشبية أو امالات خشبية ليلقلت طرخ دادالارتة أو يتتنب شفرة المنشار. (كل الش 2 و 3)

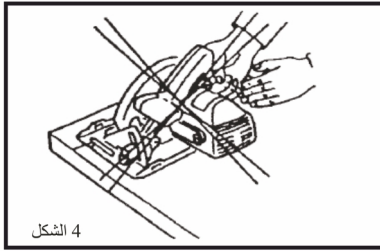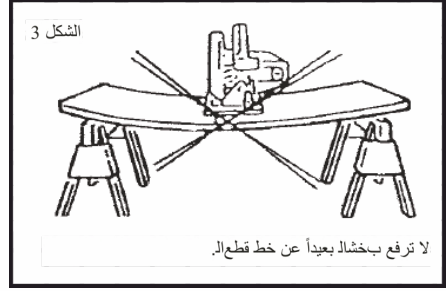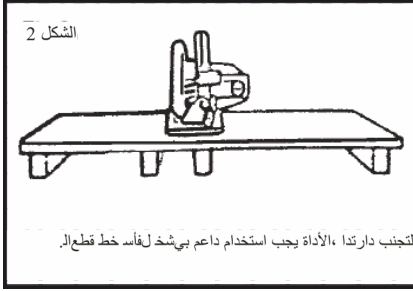


9. نبجت طرخ دادالارتة. ماعدت تنخفض سرعةال جفأة،تدرست داةالاً إلى المشغل. في التقد وثشد،ذلك أطفئ ناحفالم على الفور. لا تضع يدك أو اببعكأص خلف لأ،داة لأنه بمجرد دادارته لأ،داة دثستد اتابايد (كل الش 4).

10. بتث قطعة العمل واستخدم طريقةال الصحيحة قطع ايتنه خشب. (كل الش 5، 6 و 7)

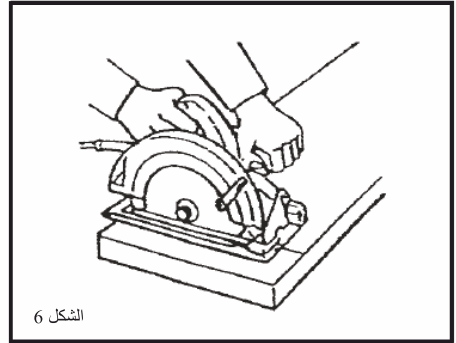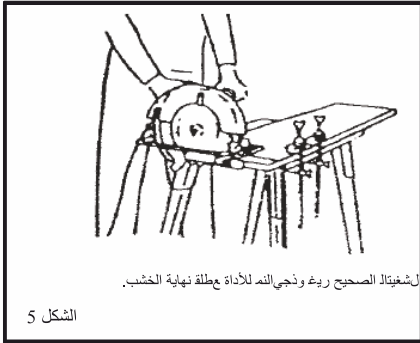

قواعد لسلامة اية فالإاض

1. اتطاحتيا استخدام المنشار دائري الـ:
 ▼ أكدت ماداء من أن امكنة الم مغلقة و غير موصولة الكهرباء قبل يامقالا أي به عمل هاعلي.
 ▼ ققتد أكدوت من أن شفرة المنشار في التمد دةجيب. لا تستخدم شفرات المنشار المشوهة أو تصدعة المـ.
 ▼ لا تستخدم شفرات المنشار المصنوعة من الفولاذ الي ع سرعة الـ.
 ▼ لا تستخدم شفرات المنشار تي ال لا فقتتوا مع انص الخصد دة المحدث في اتتعليم غيل شالتد ذهه.
 ▼ لا قفتتو شفرة المنشار عن ريقط الضغط بي الجاذ على القرص.
 ▼ فطاد على شفرات المنشار دةحا ماداء.
 ▼ أكدت من أن الغطاء الواقى يتحرك لاستبس وحرية.
 ▼ لا تستخدم المنشار دائري ال مع الغطاء الواقى ثأثاب في وضع الفتح.
 ▼ أكدت من أن آلية دة إعا الواقى تعمل بشكل صحيح.
 2. لا تستخدم أي نوع من أقراص طحن الـ.
 3. يجب أن تكون شفرة المنشار أرفع من سكين صل الو و عرض الـ، قطع ويجب أن تكون شفرات (مع ضبط نان سالا) المنشار أكبر من سمك سكين صل الو.
 4. يجب استخدام سكين صل الذ ماداء إلا ندع الغرز في منتصف قطعة العمل.
 5. أكدت من أن المسافة بين سكين صل الذ وحافة نان سالا شفرة المنشار لا يدزت عن 5 مم ولا يجب أن تبرز حافة نان سالا عن قاع سكين صل الذ أكثر من 5 مم. (كل الشد)
 6. أكدت من خلو قطعة العمل من وادالم الغريبة مثل المسامير.
 7. لا تستخدم المنشار دائري ال مع إزالة غطاء الأمان اص خال به.

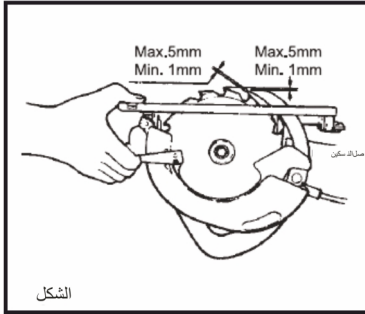

11. **أمن أدوات عملك.** استخدم أبك شمالاً أو الملزمة يتلتنب داةالأ. هذا الأمر أكثر نأماً من استخدام يدك حروري تاكل ديك غيل شلت داةالأ.
12. **لا تفرط في تخدام لاسا.** فطاد على داملكأ و توازنك في جميع اتقوالأ.
13. **فطاد الأدوات يةعنايب.** فطاد على دةد ونظافة واتالأد لأداء ضلفأ وأكثر نأماً. اتبع اتالتعليم اصةخال يتزيتبال وتغيير اتحقالم. افحص سلاكأ واتالأد يارود وإذا نتكا ،تالفة هاحصلأ في مركز الخدمة تمدالمع. افحص سلاكأ يدالتمد يارود هياستبدل إذا نتكا تالفة. فطاد تبض قمب واتالأد جافة ظيفةنو اليةخو من يتزال والشحوم.
14. **صلفا الأدوات ندع عدم استخد،دامها قبل الصيانة ندعو تغيير قالملد،ات مثل لا،شفرات اللو،قم والقواطع.**
15. **أزل تيح مفا بطلضا تيح ومفا بطالر.** اكتسب دةعا ققالتد من إزالة اتيح فم الضبط ربطالو من داةالأ قبل هاتشغيل.
16. **نبتج يل تشغال غير قصودالم.** لا تحمل داةالأ موصولة الكهرياءب مابيز تضع إصبعك على تاحفالم. أكدت من أن تاحفالم مغلق ندع صيلتو داةالأ الكهرياءب.
17. **أسلاك تمديدال تخدام لاس جي رالخر.** ندع استخدام داةالأ في ،الخارج استخدم قطف سلاكأ يدالتمد المخصصة للاستخدام الخارجي دةوالمحد ذلك.
18. **كن ظايق.** انتبه مال تفعله استخدام الحس السليم. لا تشغل داةالأ ماعند تكون بأمتمع.
19. **قق تد من زاءجلاً لفةلتا.** قبل الاستخدام ضافي الإلأ،داة يجب فحص الواقي أو أي زعج آخر تالف يدلتحد ما إذا كان يعمل بشكل صحيح ديويو وظيفته المرجوة. ققتد من ذامحا زاءالأج تالم،حركة ربطو زاءالأج تالم،حركة وانكسار ء،الأجزا ،والتركيب وأي روفظ أخرى قد تؤثر على هاتشغيل.
- يجب إصلاح الواقي أو أي زعج آخر تالف بشكل صحيح من قبل مركز الخدمة تمدالمع ما لم يُذكر لافذ ذلك في اتتعليم غيل شالت ذهه. دل استب اتيح فالم التالفة سطقبوا مركز الخدمة تمدالمع. لا تستخدم داةالأ إذا كان تاحفالم لا يقوم هابتشغيل وإيقاف هاتشغيل.
20. **تحذير!** استخدام أي حقمل أو ققمر غير صى المو به في اتتعليم غيل شالت ذهه قد يشكل طراذ على سلامةالشخصية.
21. **أصلح تكالاد سطقبوا خصش موهل.** ذهه داةالأ اائية الكهري في


ات اظتياح يل تشغال عامة ال

تحذير! ندع استخدام وات الاد الكهري، ائية يجب ماداء باع ات طا الاحتيا الأساسية سلامة لا ليل قلت طرخ ق، ير الد ات صمدال ائية الكهري ات باو الاص، الشخصية ما في ذلك ما يلي.


قرأ جميع ذه بات التعليم قبل غيل شت هذا المنتج فظواحت هاب.

يل تشغل الآمن:

1. **حافظ لى ع ظافنة طقة من عمل ال.** طق بالمذ اعد قموال وضويغفال والمزدحمة تجلب ات ابالاص.
2. **فكر في ثقب طقة من عمل ال.** لا تعرض وات الاد ائية الكهري طرللم. لا تستخدم وات الاد ائية الكهري في أماكن رطبة أو مبللة. فظاحت طقة بمن العمل ضاءةم يدا. لا تستخدم داة ال في ودجو ائل سوال ابلة قال لاشتع أو ازاز الغ. وات الاد ائية الكهري تنتج شرراً أثناء غيل شالت. ماك تنتج شرراً ندع غيل شالت/الإيقاف. لا تستخدم وات الاد ائية الكهري في مواقع خطرة تحتوي على، الورنيش، الطلاء، البنزين، النثر، البنزين الغمازات وامل ال، الالصقة هاريغو من، المواد ابلة قال راق للاح أو الانفجار.
3. **حم فسك من بات الصدمية بانرهاك.** نبجت التلامس دي سالج مع طح الأس المؤرضة. على بيل سد المثال الأنا، بيب، المدافى الأ، فران ات او يحو ات لاجالته.
4. **بعدا ل لأطفال.** لا تدع الزوار لامسون تي مع داة ال أو سلك يدا لتمد. يجب ادا بع جميع الزوار عن طقة من العمل.
5. **خزن الأدوات غير تخدم لملسا.** ندع عدم، الاستخدام يجب تخزين وات الاد في مكان جاف الودع أو، مقفل يدا بع عن اول متد لطفالاً.
6. **لا خدم تست داة ال لقوة با.** تعمل داة ال بشكل ضلفاً وأكثر نأما دل بالمع ذي ال صممت من أجله.
7. **خدم است داة ال أحة صحال.** لا تضغط على داة صغيرة أو فمر صغير يامقل بمهمة داة ال الثقيلة. لا تستخدم داة ال لغير الغرض المرجو هامذ.
8. **ارتد بس الملا بة ناسالم.** لا ديرتت ملابس اضة قصف أو وهرات جم. قد تعلق في زاء الأج المتحركة. صيو بار تداء ازازت القالمطاطية ذية حوالاً غير ابلة قال لاق لالانز ندع العمل في الخارج. تدر ا غطاء واقى للشعر لاحتواء الشعر وبل طال.
9. **خدم است ية وقا ين لل.** استخدم ضاأي ناعق للوجه أو ناعق غبار إذا نتكا عملية قطع ال تنتج غباراً.
10. **لا تسيء تخدام اس سلك ال.** لا تحمل داة ال من السلك أو تسحب لفصله من المقبس. بعدا السلك عن الحرارة يتزوال رافو الأط دة الحال.

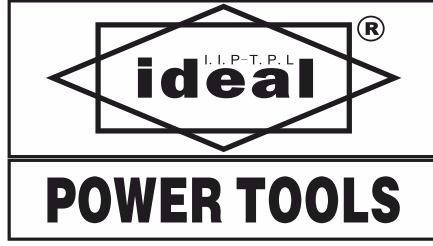

منشار دائري ID C7SC رقم القطعة: ٢٦٧٣١

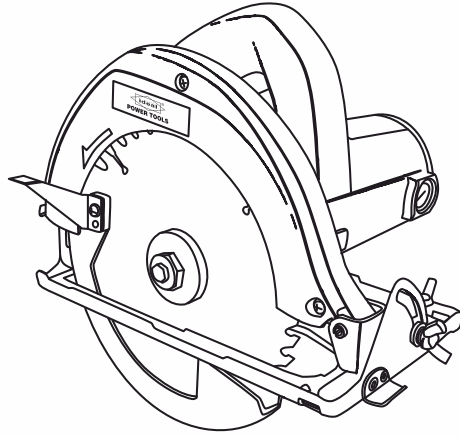

اقرأ هذه التعليمات بعناية وفهمها قبل الاستخدام. 

تعليمات التشغيل