





IDGEX-150H


ROTARY SANDER


Manual



Read through carefully and understand these instructions before use.

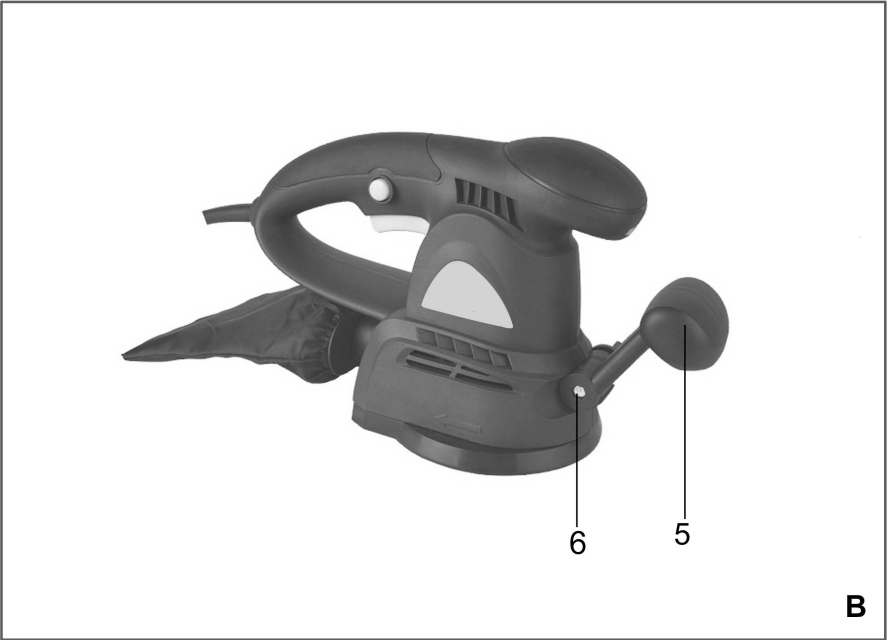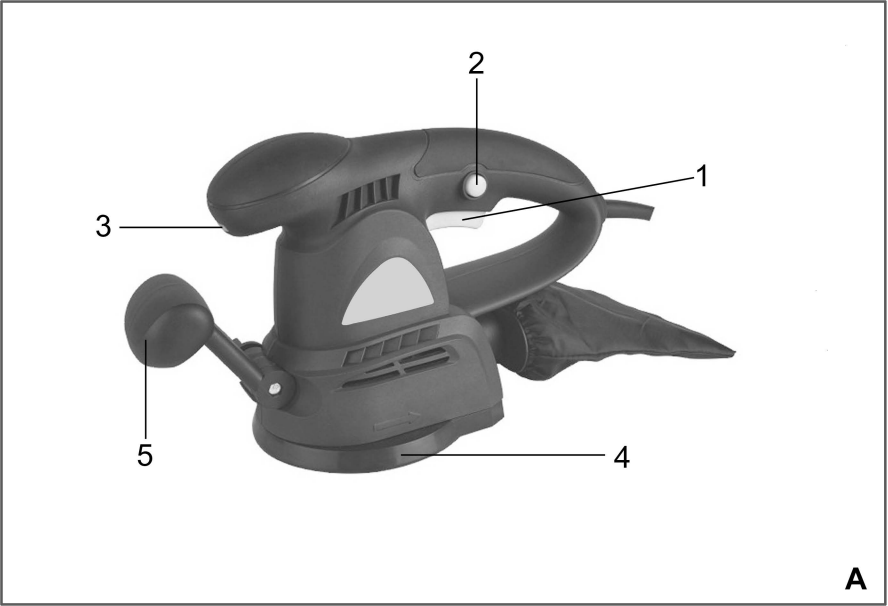

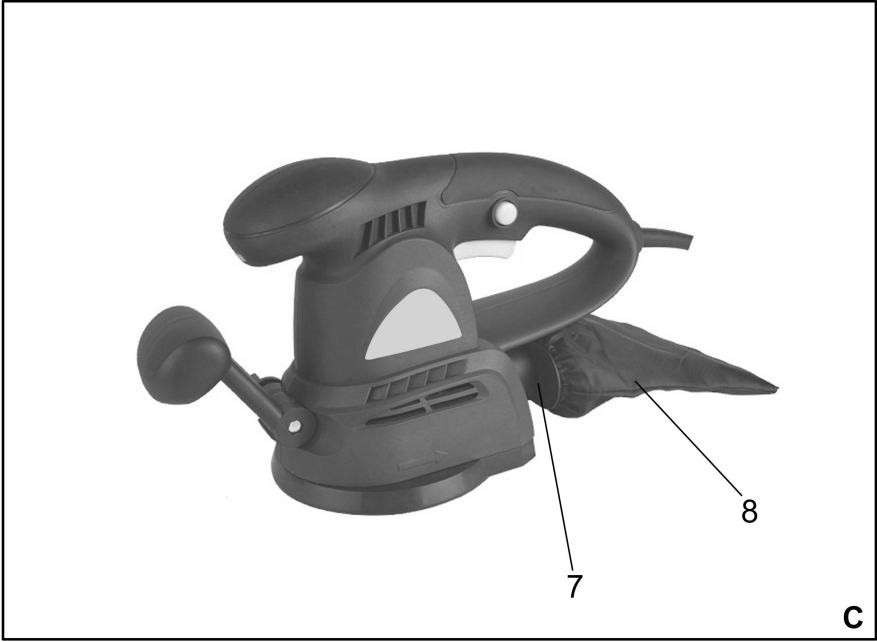

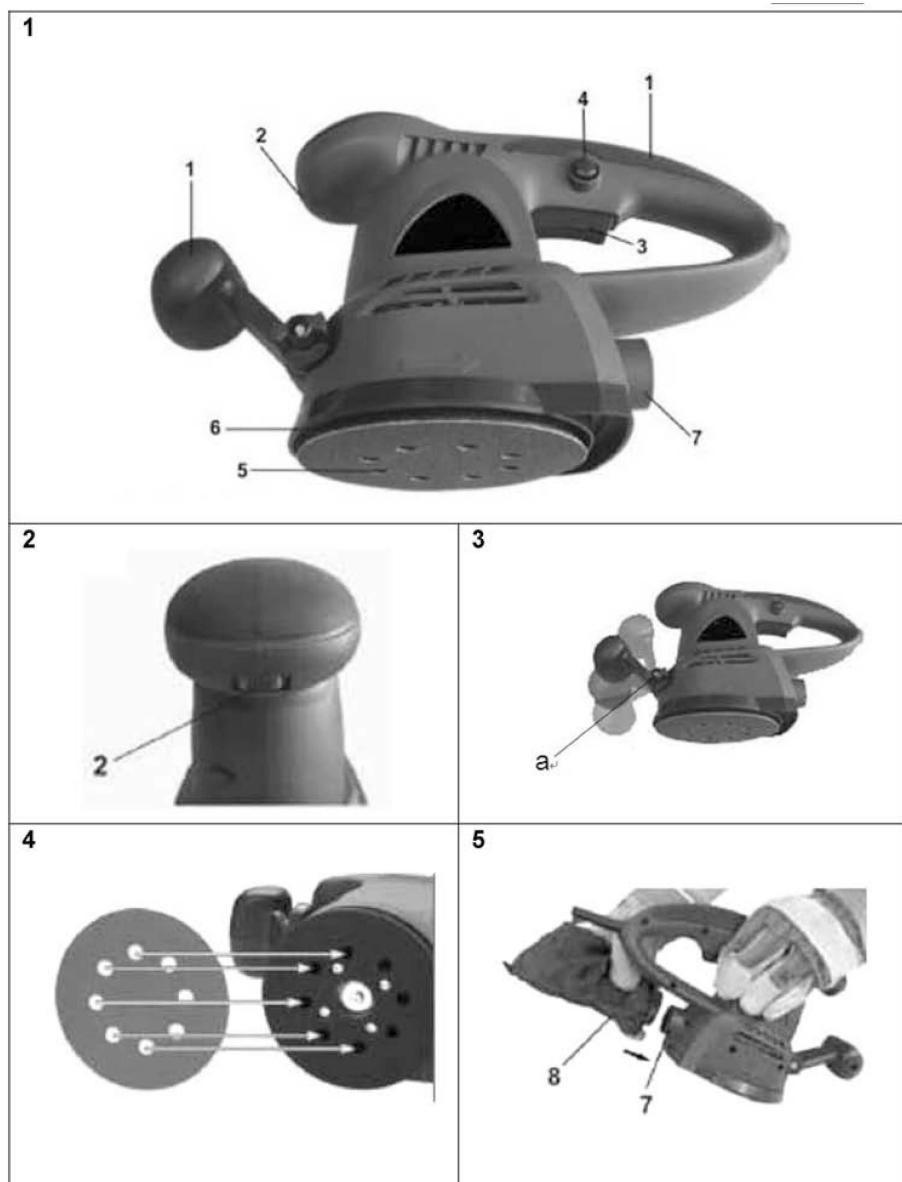

ROTARY SANDER

WARNING

Read this manual carefully before using the machine, for your own safety.

SAFETY INSTRUCTIONS

When using the machine, always observe the enclosed safety instructions as well as the additional safety instructions.

The following symbols are used throughout this manual:



Denotes risk of personal injury or damage to the tool.

ADDITIONAL SAFETY INSTRUCTIONS FOR SANDERS

Observe the applicable regulations when sanding painted surfaces.

Whenever possible, use a vacuum extractor for dust collection.

Remove dust and other waste matter in an environmentally safe way.

Take special care when sanding lead based paint

-All persons entering the work area, must wear a mask specially designed for protection against lead paint dust and fumes.

Children and pregnant women must not enter the work area.

-Do not eat, drink or smoke in the work area.

ELECTRICAL SAFETY



Always check that the power supply corresponds to the voltage on the rating plate.

DESCRIPTION (fig.A)

Your orbital sander has been designed for sanding applications.

- 1 On/off switch
- 2 Lock button
- 3 Speed adjusting wheel
- 4 Sanding pad
- 5 Side handle

Fitting sanding sheets (fig.A)

Make sure that the perforations in the paper correspond with those on the sanding pad.

Press the paper firmly on the sanding pad.



The sanding paper must be fitted firmly on the sanding pad and should not come loose.

Adjusting the side handle (fig.B)

The side handle (5) can be height-adjusted.

Loosen the lock knob (6).

Adjust the side handle (5) to the required height.

Tighten the lock knob.

Switching on and off (fig.A)

To switch on the machine press the on/off switch (1).

To adjust the orbits, turn the adjusting wheel (3).

To switch off the machine, release the on/off switch (1).

To switch the machine to continuous mode, you keep the on/off switch (1) fully pressed and simultaneously press the lock button (2). And subsequently release the on/off switch.

To switch off continuous mode, press the on/off switch (1) again.



Never use the machine for sanding magnesium workpieces.

Dust extraction (fig.C)

The dust extraction outlet together with the dust bag takes care of the dust extraction of the working surface.

Slide the dust bag (8) onto the connection (7).

Regularly empty the dust bag to ensure optimum dust extraction.

CLEANING AND MAINTENANCE

The machine does not require any special maintenance.

Regularly clean the ventilation slots.

TECHNICAL DATA

Mains voltage	V	220-240
Mains frequency	Hz	50/60
Power input	W	430
Orbits	/min	6,000-12,000
Sanding surface	mm	150

الروتاري سائدر

تحذير

اقرأ هذا الدليل بعناية قبل استخدام الجهاز ، من أجل سلامتك.

تعليمات السلامة

عند استخدام الجهاز ، يجب دائما مراعاة تعليمات السلامة المرفقة بالإضافة إلى تعليمات السلامة الإضافية.

يتم استخدام الرموز التالية في هذا الدليل:



يشير إلى خطر الإصابة الشخصية أو تلف الأداة.

تعليمات السلامة الإضافية لمستخدمي

مراعاة اللوائح المعمول بها عند صنفرة الأسطح المطلية.

كلما أمكن ، استخدم مكتسة كهربائية

مستخرج لجمع الغبار.

قم بإزالة الغبار والنفايات الأخرى بطريقة آمنة بيئيا.

توخ الحذر بشكل خاص عند صنفرة الطلاء القائم على الرصاص

- يجب على جميع الأشخاص الذين يدخلون منطقة العمل ارتداء قناع مصمم خصيصا للحماية من غبار وأبخرة طلاء الرصاص.

يجب على الأطفال والنساء الحوامل عدم دخول منطقة العمل.

- لا تأكل أو تشرب أو تدخن في منطقة العمل.

السلامة الكهربائية

تحقق د



الوصف (الشكل أ)

تم تصميم آلة الصنفرة المدارية الخاصة بك لتطبيقات الصنفرة.

1 مفتاح تشغيل / إيقاف

2 قفل بوتور

3 عجلة ضبط السرعة

4 وسادة سنفرة

5 مقبض جانبي

صالحات الصنفرة الترشجية (الشكل أ)

تأكد من أن الثقوب الموجودة في الورق تتوافق مع تلك الموجودة على وسادة الصنفرة.

اضغط على الورق بإحكام على وسادة الصنفرة.



يجب تركيب ورق الصنفرة بإحكام على وسادة الصنفرة ويجب ألا ينفصل.

ضبط المقبض الجانبي (الشكل ب)

يمكن تعديل ارتفاع المقبض الجانبي (5). قم بفك مقبض القفل (6).

اضبط المقبض الجانبي (5) على الارتفاع المطلوب.

شد مقبض القفل.

تشغيل وإيقاف (الشكل أ)

لتشغيل الجهاز ، اضغط على مفتاح التشغيل/الإيقاف (1) .

لضبط المدارات ، أدر عجلة الضبط (3).

لإيقاف تشغيل الجهاز ، حرر مفتاح التشغيل/الإيقاف (1) .

لتبديل الجهاز إلى الوضع المستمر ، يمكنك الضغط بشكل كامل على مفتاح التشغيل/الإيقاف (1) والضغط في نفس الوقت على زر القفل (2). وبعد ذلك حرر مفتاح التشغيل / الإيقاف.

لإيقاف تشغيل الوضع المستمر ، اضغط على مفتاح التشغيل/الإيقاف (1) مرة أخرى.

لا تستخدم الماكينة أبدا لصنفرة قطع عمل المغنيسيوم.



شفط الغبار (تين.ج)

يعتني مخرج شفط الغبار مع كيس الغبار باستخراج الغبار من سطح العمل.

حرك كيس الغبار (8) على الاتصال (7).

أفرغ كيس الغبار بانتظام لضمان شفط الغبار الأمثل.

التنظيف والصيانة


الجهاز لا يتطلب أي صيانة خاصة.


نظف فتحات التهوية بانتظام.

معلومات تقنية

220-240	V	التيار الكهربائي
50/60	Hz	تردد التيار الكهربائي
430	W	مدخلات الطاقة
12,000-6,000	min/	المدارات
150	mm	سطح الصنفرة



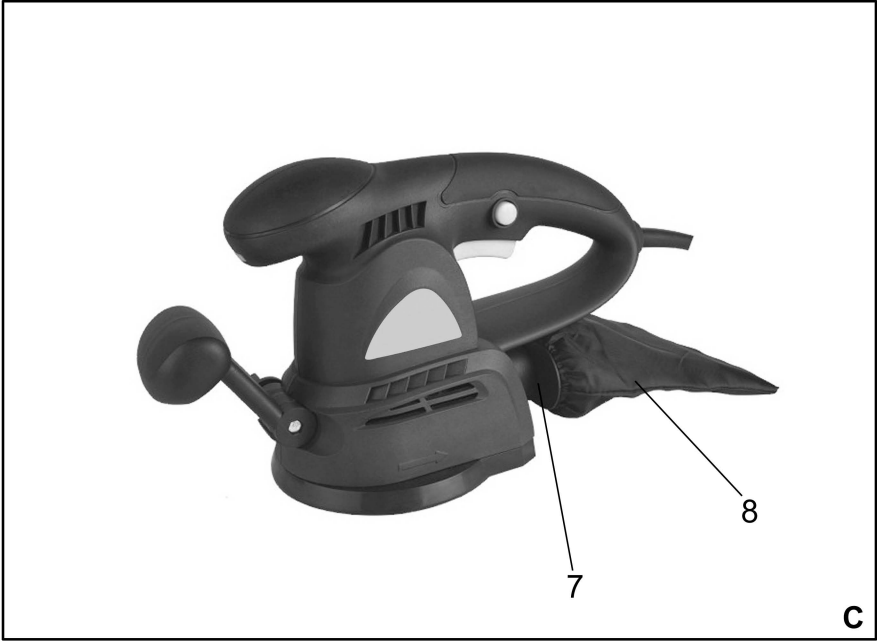

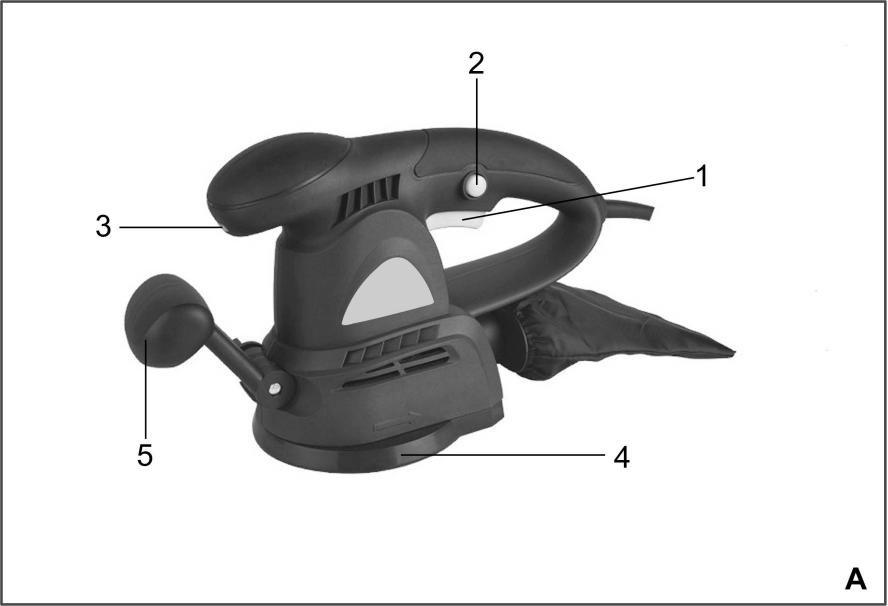



IDGEX-150H

125MM الروتاري ساندس

تعليقات التشغيل



اقرأ بعناية وافهم هذه التعليمات قبل الاستخدام.